

TRÅDLØSE, BATTERIFRIE KONTROLLBOKSER

SW14-080-RFH8

Trådløs soppbryter med boks

- Ingen kabler
- Ingen batterier
- Kapsling i slagfast ABS



PRODUKTBESKRIVELSE

 
 
Fra Comepi har vi ulike kontrollbokser med f.eks. soppknapp eller to knapper med piler. Ta kontakt med oss for mer informasjon.

TEKNISKE DATA

IP-klasse	IP66
Materiale hus	Plast
Temperaturområde fra	-25 °C
Temperaturområde til	70 °C



Installation tips
The wireless signal works at its best when the space is free between the receiver and the transmitter.
Eliminate as far as possible obstacles, mostly if they are metallic!



RRH8 (868MHz) and RRH9 (902MHz) receivers
Main features

One operator - White ON pushbutton

Code	Description	Frequency
SW11-001-RFH8	Chrome plated zamak body	868MHz
SW14-001-RFH8	Plastic body	868MHz
SW11-001-RFH9	Chrome plated zamak body	902MHz
SW14-001-RFH9	Plastic body	902MHz

One operator - Green START pushbutton

Code	Description	Frequency
SW11-002-RFH8	Chrome plated zamak body	868MHz
SW14-002-RFH8	Plastic body	868MHz
SW11-002-RFH9	Chrome plated zamak body	902MHz
SW14-002-RFH9	Plastic body	902MHz

One operator - Black 40mm mushroom pushbutton without latch

Code	Description	Frequency
SW11-003-RFH8	Chrome plated zamak body	868MHz
SW14-003-RFH8	Plastic body	868MHz
SW11-003-RFH9	Chrome plated zamak body	902MHz
SW14-003-RFH9	Plastic body	902MHz

One operator - Yellow 40mm mushroom pushbutton without latch

Code	Description	Frequency
SW11-004-RFH8	Chrome plated zamak body	868MHz
SW14-004-RFH8	Plastic body	868MHz
SW11-004-RFH9	Chrome plated zamak body	902MHz
SW14-004-RFH9	Plastic body	902MHz

One operator - Black 30mm mushroom pushbutton without latch

Code	Description	Frequency
SW11-005-RFH8	Chrome plated zamak body	868MHz
SW14-005-RFH8	Plastic body	868MHz
SW11-005-RFH9	Chrome plated zamak body	902MHz
SW14-005-RFH9	Plastic body	902MHz

One operator - Black 60mm mushroom pushbutton without latch

Code	Description	Frequency
SW11-006-RFH8	Chrome plated zamak body	868MHz
SW14-006-RFH8	Plastic body	868MHz
SW11-006-RFH9	Chrome plated zamak body	902MHz
SW14-006-RFH9	Plastic body	902MHz

One operator - Two positions selector switch 0-1 maintained

Code	Description	Frequency
SW11-007-RFH8	Chrome plated zamak body	868MHz
SW14-007-RFH8	Plastic body	868MHz
SW11-007-RFH9	Chrome plated zamak body	902MHz
SW14-007-RFH9	Plastic body	902MHz

One operator - Two positions selector switch with key 0-1 maintained

Code	Description	Frequency
SW11-008-RFH8	Chrome plated zamak body	868MHz
SW14-008-RFH8	Plastic body	868MHz
SW11-008-RFH9	Chrome plated zamak body	902MHz
SW14-008-RFH9	Plastic body	902MHz

One operator - Joystick one positions selector switch with return

Code	Description	Frequency
SW11-009-RFH8	Chrome plated zamak body	868MHz
SW14-009-RFH8	Plastic body	868MHz
SW11-009-RFH9	Chrome plated zamak body	902MHz
SW14-009-RFH9	Plastic body	902MHz

One operator - Black extended pushbutton

Code	Description	Frequency
SW11-010-RFH8	Chrome plated zamak body	868MHz
SW14-010-RFH8	Plastic body	868MHz
SW11-010-RFH9	Chrome plated zamak body	902MHz
SW14-010-RFH9	Plastic body	902MHz

One operator - Black 90mm wobble palm switch

Code	Description	Frequency
SW14-000-RFH8	Plastic body	868MHz
SW14-000-RFH9	Plastic body	902MHz

Two operators - UP & DOWN pushbuttons

Code	Description	Frequency
SW21-001-RF16	Chrome plated zamak body	868MHz
SW24-001-RF16	Plastic body	868MHz
SW21-001-RF16	Chrome plated zamak body	902MHz
SW24-001-RF16	Plastic body	902MHz

Two operators - ON & OFF pushbuttons

Code	Description	Frequency
SW21-002-RF16	Chrome plated zamak body	868MHz
SW24-002-RF16	Plastic body	868MHz
SW21-002-RF16	Chrome plated zamak body	902MHz
SW24-002-RF16	Plastic body	902MHz


Two operators - START & STOP pushbuttons

Code	Description	Frequency
SW21-003-RF16	Chrome plated zamak body	868MHz
SW24-003-RF16	Plastic body	868MHz
SW21-003-RF16	Chrome plated zamak body	902MHz
SW24-003-RF16	Plastic body	902MHz



Installation tips

 The wireless signal works at its best when the space is free between the receiver and the transmitter. Eliminate as far as possible obstacles, mostly if they are metallic!



RRH8 (868MHz) and RRH9 (902MHz) receivers

Main features

One operator - White ON pushbutton

Code	Description	Frequency
SW11-001-RF16	Chrome plated zamak body	868MHz
SW14-001-RF16	Plastic body	868MHz
SW11-001-RF16	Chrome plated zamak body	902MHz
SW14-001-RF16	Plastic body	902MHz

One operator - Green START pushbutton

Code	Description	Frequency
SW11-002-RF16	Chrome plated zamak body	868MHz
SW14-002-RF16	Plastic body	868MHz
SW11-002-RF16	Chrome plated zamak body	902MHz
SW14-002-RF16	Plastic body	902MHz

One operator - Black 40mm mushroom pushbutton without latch

Code	Description	Frequency
SW11-003-RF16	Chrome plated zamak body	868MHz
SW14-003-RF16	Plastic body	868MHz
SW11-003-RF16	Chrome plated zamak body	902MHz
SW14-003-RF16	Plastic body	902MHz

One operator - Yellow 40mm mushroom pushbutton without latch

Code	Description	Frequency
SW11-004-RF16	Chrome plated zamak body	868MHz
SW14-004-RF16	Plastic body	868MHz
SW11-004-RF16	Chrome plated zamak body	902MHz
SW14-004-RF16	Plastic body	902MHz

One operator - Black 30mm mushroom pushbutton without latch

Code	Description	Frequency
SW11-005-RF16	Chrome plated zamak body	868MHz
SW14-005-RF16	Plastic body	868MHz
SW11-005-RF16	Chrome plated zamak body	902MHz
SW14-005-RF16	Plastic body	902MHz

One operator - Black 60mm mushroom pushbutton without latch

Code	Description	Frequency
SW11-006-RF16	Chrome plated zamak body	868MHz
SW14-006-RF16	Plastic body	868MHz
SW11-006-RF16	Chrome plated zamak body	902MHz
SW14-006-RF16	Plastic body	902MHz

One operator - Two positions selector switch 0-1 maintained

Code	Description	Frequency
SW11-007-RF16	Chrome plated zamak body	868MHz
SW14-007-RF16	Plastic body	868MHz
SW11-007-RF16	Chrome plated zamak body	902MHz
SW14-007-RF16	Plastic body	902MHz

One operator - Two positions selector switch with key 0-1 maintained

Code	Description	Frequency
SW11-008-RF16	Chrome plated zamak body	868MHz
SW14-008-RF16	Plastic body	868MHz
SW11-008-RF16	Chrome plated zamak body	902MHz
SW14-008-RF16	Plastic body	902MHz

One operator - Joystick one positions selector switch with return

Code	Description	Frequency
SW11-009-RF16	Chrome plated zamak body	868MHz
SW14-009-RF16	Plastic body	868MHz
SW11-009-RF16	Chrome plated zamak body	902MHz
SW14-009-RF16	Plastic body	902MHz

One operator - Black extended pushbutton

Code	Description	Frequency
SW11-010-RF16	Chrome plated zamak body	868MHz
SW14-010-RF16	Plastic body	868MHz
SW11-010-RF16	Chrome plated zamak body	902MHz
SW14-010-RF16	Plastic body	902MHz

One operator - Black 90mm wobble palm switch

Code	Description	Frequency
SW11-000-RF16	Plastic body	868MHz
SW14-000-RF16	Plastic body	902MHz

Two operators - UP & DOWN pushbuttons

Code	Description	Frequency
SW21-001-RF16	Chrome plated zamak body	868MHz
SW24-001-RF16	Plastic body	868MHz
SW21-001-RF16	Chrome plated zamak body	902MHz
SW24-001-RF16	Plastic body	902MHz

Two operators - ON & OFF pushbuttons

Code	Description	Frequency
SW21-002-RF16	Chrome plated zamak body	868MHz
SW24-002-RF16	Plastic body	868MHz
SW21-002-RF16	Chrome plated zamak body	902MHz
SW24-002-RF16	Plastic body	902MHz

Two operators - START & STOP pushbuttons

Code	Description	Frequency
SW21-003-RF16	Chrome plated zamak body	868MHz
SW24-003-RF16	Plastic body	868MHz
SW21-003-RF16	Chrome plated zamak body	902MHz
SW24-003-RF16	Plastic body	902MHz